



Hybrid 3.5 HDD+3*M.2 NVMe Enclosure for 2.5/3.5" SATA HDD/SSD and 2230/42/60/80/110

PRODUCT INSTRUCTION

Model: 802SN13-10G

CENMATE

【Quality Assurance】 Cenmate provides lifetime technical support. Please don't hesitate to contact us if you have any questions about the product, we reply and solve your problem within 24 hours.

Technical Support Contact: cenmate23@outlook.com

【Low Heat】 The hard drive enclosure with Aluminum-Alloy materials and built-in 2 inch Fans provide better heat dissipation, maximize the security of your data. Fan noise is around 40-60 decibels, not recommended if you are sensitive to noise.

Qusetion

Q1: After connecting new hard drive to the computer, why can't I find the hard drive and display the disc letter?

A1: After the new hard drive is connected to the computer, it must be formatted before the system can be recognised and used. Method of operation: First, right-click 'Computer', then click 'Management', open into the 'Disk Management', find the new hard drive, right-click 'Initialisation 'Select 'MBR (hard drive capacity less than or equal to 2TB)' or 'GPT (more than 2TB)', then 'New Simple Volume', the default next step to format the partition. Formatting is completed after the hard drive can be used normally, showing the new disc symbols.

Q2: The hard drive appears in RAW format in Disk Management due to improper extraction or power failure. What should I do?

A2: Recovery through the chkdsk command; operation method: administrator identity run cmd input CHKDSKi:/f enter (here the i is the disk letter of the disk), scanning and repair is complete reboot can be displayed.

Q3: The hard drive is dynamically invalid in Disk Management since it was previously removed from an old computer?

A3: This is due to your system. Reinstall the hard drive into the original computer motherboard, and then backed up the data format; If your old computer has been scrapped or can't get into the system, you can download a dynamic drive conversion software to convert directly to a basic drive.

Q4: Hard drive just shows up but no disc letter?

A4: Inside Disk Management, right-click on the Disk Partition section and select Change Disk Path and Name to add a disk name for use.

Q5: It automatically disconnects during transmission

A5: It may be problems of usb interface on computer, usb cable, computer usb driver, hard drive, or hard drive cabinet. You need to contact our technicians to check the problems one by one.

Product Specifications

HDD Supported	Supports 2.5/3.5 inch SATA HDDs and SSDs M.2 SSD Supported Supports 2230/42/60/80/110 NVMe SSD
Cooling Fan	2 Inch Cooling Fan
Interface	USB 3.2
Max. Transfer Rate	10Gbps
OS Support	Windows 2000 or above, MAC OS 10.3 or above, and Linux
Power Adapter	12V Power Adapter
Enclosure	Extruded Aluminum Case
Dimension	205x130x80mm
Note	HDD/SSD is not included

CONTENT

- 1. Hybrid 3.5 HDD+3*M.2 NVMe Enclosure
- 2. Mounting screws and screw driver
- 3. USB 3.2 A/C Cable
- 4. 12V Power Supply
- 5. User Manual

How to use

- 1.Pull out the tray
- 2.Install the HDD/SSD and M.2 SSD
- 3.Connect USB to the computer
- 4.Plug in the power supply, turn on the power switch
- 5. The fan rotates and the hard drive light is on indicating

that it is normal and you can start using it.

Feature



- 1. ON/OFF : Power
- 2. DC IN: 12V Power Supply
- 3. Type-C: USB 3.2 (MAX 10Gbps)
- 4. Cooling Fan : 2 Inch Fan

Steps for Installing a Hard Drive Bracket Removing



Squeeze the blue spring clip to wards the centre and pull the bracket outwards.

M.2 SSD Installation

1



Insert M.2 SSD into slot until they cocked.



Snap the rubber plug into the metal half-circle of the M.2 SSD.

3



Press the rubber plug with the M.2 SSD down into the bayonet until it's secure.

3.5' HDD Installation



Pull up the blue clasp on both sides of the bracet.



Put hard drive gentlely, snap the carabiner pins into the 3.5 HDD side screw holes.



Remove blue clasp on the side by screwdriver.





Use screws to secure the 2.5' HDD/SSD in the corresponding holes.

Lighting Display Instructions



M.2 NVMe light prompts

- M.2-1 and M.2-2 share this light, when connected red +blue, will show purple light.
- The blue light is the M.2-1 light, it will always on when connected, flashes when read/write.
- The red light is the M.2-2 light, it will always on when connected, flashes when read/write.
- ² The red light is for M.2-3 light, it will always on when connected, flashes when read/write.

3.5 HDD/2.5 SSD light prompts

- ③ The connection light is always on blue (indicating a normal connection)
- 4 Read / Write light flashes red.

Partition and Format

Note: Formatting is only required for new drives



Please follow below information on how to partition and format the drives before use



Data will be lost when you reset the unit.



Initialize Disk	×
You must initialize a disk before Logical Disk Manager can access it.	
Select disks:	
☑ Disk 1 ☑ Disk 2	
Use the following partition style for the selected disks: • MBR (Master Boot Record) • GPT (SUP) Partion Table)	
Note: The GPT partition style is not recognized by all previous versions of Windows.	
OK Cancel	

Select the new drive to start with the configuration. Select:

MBR (hard drive capacity less than or equal to 2TB) GPT (bigger than 2TB)

When new drive appears, right click on it and select "New Simple Volume"

	Volume	Ling	ut Type Ne Syste	-		Status	Actions	
 Basen Noch Bask Scholder Bask Scholder Bonet Wener Bonet	= (C) = (Diak 0 partition = (Diak 0 partition = Driver (S) = TRNYCORE (D)	Sing 1) Sing 4) Sing Sing Sing	le Basic NTIS-(b de Basic de Basic de Basic NTIS-(b de Basic NTIS-(b de Basic TAT32	Locker Encry	gried) graed)	meality (Boot, Page H Insaithy (Bri System P Insaithy (Bootwary Par Healthy (Basic Data P Healthy (Basic Data P)	Disk Management More Actions	
	Thic Basic 238.45 GB Online	100 8 Healt	IC) 23032 GB NTFS (I Healthy (Boot, Pa;	1.24 GB Healthy (TINYC 200 M Health	Driver (E) 6.00 GB NTP Healthy (Bas		
	Totak 1 Ratic 465.75 68	465.76	GB	New	Şinçılır	there.		

New Simple Vo	blume Wizard	×
	Welcome to the New Simple Volume Wizard	
	This wizard helps you create a simple volume on a dis	k
	A simple volume can only be on a single disk.	
	To continue, click Next.	
	< Back Next >	Cancel

When the wizard window appears, click on [Next].

Select the partition size We reccomend to use as maximum and click on [Next].

New	Simple Volume Wizard		×
Sp	ecify Volume Size Choose a volume size that is between the n	naximum and minimum sizes.	
	Maximum disk space in MB:	476937	
	Minimum disk space in MB:	8	
	Simple volume size in MB:	476937	
		< <u>Back</u> <u>Next</u> Cancel	

New Simple Volume Wizard	×
Assign Drive Letter or Path For easier access, you can assign a drive letter or drive path to your partition	
Cassing the following drive letter: E	
< Book Next >	Cancel

Select the drive letter to a sign the hard drive and click on [Next]. Select the format settings: NTFS or "FAT 32", "DEFAULT" and Volume Label (Select the features that you need to format: "FAT32", "Predetermined", the hard drive label that you need (example:"New Volume") and "Perform a quick format".

New Simple Volume Wizard		×
Format Partition To store data on this partition, you m	ust format it first.	
Choose whether you want to format t	this volume, and if so, what settings you want to use.	
O Do not format this volume		
Format this volume with the following the second	lowing settings:	
<u>File</u> system:	NTFS ~	
Allocation unit size:	exFAT NTFS	
⊻olume label:	New Volume	
Perform a quick format		
Enable file and folder co	mpression	
	< <u>B</u> ack Next > Cancel	

New Simple Vo	blume Wizard X
	Completing the New Simple Volume Wizard
	You have successfully completed the New Simple Volume Wizard. You selected the following settings:
	Volume hors: Simple Volume Dot exclude: Disk: Volume size: 47937 MB Drive latter or path: F: File system: NTFS Allocation unst size: Default Volume label: New Volume Destermet Hors
	To close this wizard, click Finish.
	< Back Finish Cancel

New partition is complete and your hard drive is ready to be used. Click on [Finish].

Data Testing and Reading Speed



3.5 HDD+3 * M.2 read/write speed is between 200-300MB/s

- 1 * 3.5 HDD read/write speed is between 200-300MB/s
- 1 * M.2 read/write speed is between 500-600MB/s
- 2 * M.2 read/write speed is between 400-500MB/s
- 3 * M.2 read/write speed is between 200-300MB/s

Troubleshooting Self-checking Steps

1. Check if the device (hard drive) connected to the product is faulty.

Connect to the SATA or NVME/PCIE slot on the motherboard via a SATA hard drive to check the status. Verify that the hard drive is partitioned and formatted properly.

2. If connected to a PC, check the status of the PC. Check that the PC's USB port is working properly. Connect to another PC and check if the same condition occurs. Make sure your PC is not infected with virus.

3. Check the USB cable or adapter of the product. Use an extra USB cable (USBA-B used for the printer) to check whether there is problem of product USB cable. Check if the adapter is faulty (if the product has a power supply).

Caution

Do not connect the 802SN13-10G and hard drive to a computer when they are not fully assembled. There is a risk of damage and electric shock to the hard drive.

We will not be liable for damages to the hard drive used in connection with this equipment. We will not be liable for loss of data recorded on the hard drive.